DUODISK TECHNICAL PROCEDURES

TABLE OF CONTENTS

Section 1. Troubleshooting
General Information
Section 2. Adjustments
D-Speed Test and Adjustment2.2
Section 3. Take-Apart
Removing the Cover and Shield
Section 4. Illustrated Parts List
Illustrated Parts List and Diagrams4.1
Appendix A. Special Repair Procedure for Loose Boards
BackgroundA.l ProcedureA.l

©Apple Computer, Inc., 1985. No part of this document may be reproduced in any form without the written permission of Apple Computer, Inc.

DuoDisk is a trademark of Apple Computer, Inc. Apple and the Apple logo are registered trademarks of Apple Computer, Inc.



Duodisk Technical Procedures

Appendix A

SPECIAL REPAIR PROCEDURE FOR LOOSE ANALOG BOARDS (DUODISKS WITH SERIAL NUMBER BELOW 325000)

BACKGROUND


On some Duodisks with serial numbers before 325000, the analog board is too loose and may slip out of its guide track (the forward supports on the sides of the shield - see Figure 1, #1, next page). This brings the analog board into contact with the disk mechanical assembly and may short circuit the board when power is applied. Where this condition exists, the sides of the shield must be bent inward slightly to prevent the board from falling. This document contains the procedure.

(This is a low-level problem, mostly limited to Duodisks found "dead on arrival". Apple has already upgraded the inventory of Duodisks with serial numbers of 325000 and above.)

PROCEDURE

- Check the serial number of the Duodisk: If it is below 325000, continue with this procedure.
- 2. Check to see if the board has slipped out of the guide track and if transistor Q2 on the front of the old board has blown (the damage will be visible.) If so, continue with this procedure.
- If Q2 has blown, or if the board is otherwise bad, replace the bad analog board with a good board.

If the board has not blown but has a visible tendency to fall off its supports, you should also perform this procedure.

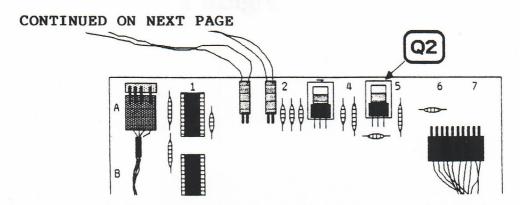

Duodisk Analog Board Repair rev. May 84 page A.l

apple computer

Using needlenose pliers, bend the top of the shield inward about 1 mm., so that the guides hold the analog board firmly in place (see Figure 1, #1).

IMPORTANT: Do not bend the shield too far, as any stress on the mechanical assembly may cause problems with the head radial adjustment.

- Run the Drive Acceptance Program (DAP) tests, to check 5. for possible head radial adjustment problems due to stress on the mechanical assembly. If you find such problems, bend the shield back until they no longer occur. If the drive continues to fail the DAP, send it back to Apple for repair.
- 6. Look through the disk drive door to make sure that the analog board is seated correctly. If the analog board still shows a tendency to fall off its supports, repeat steps 4-6.

Top View of Shield, Drive 1

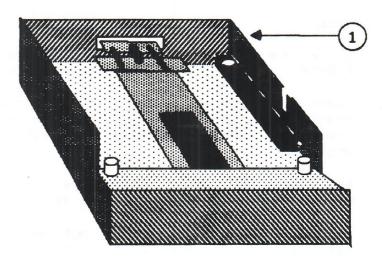


Figure 1



Duodisk Technical Procedures

Appendix B

Illustrated Parts List


Contents			
Duodisk			D



The figures and lists below include all piece parts that can be purchased separately from Apple for the DuodiskTM disk drive along with their part numbers. Refer to your Apple Service Programs binder for prices.

Duodisk (Figure 1)


Item	P/N	Description
1 2 3 4 5 6 7 8	400-1604 805-5002 676-5101 805-5000 805-5003 676-5103 415-1410 590-0114	Screw 6-32x1/4 Shield, Top, Drive 2 Subassembly, Bottom Cover Shield, Bottom, Duodisk Shield, Mounting, Drive 1 Top Cover Assembly Screw Assemlby Cable, DB-19 to Disk

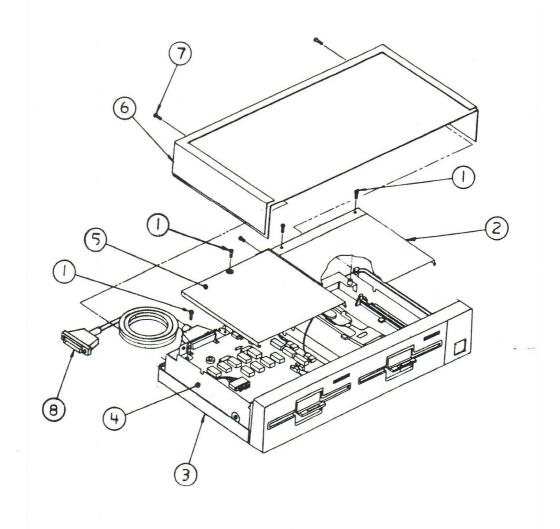

apple computer

Duodisk (Figure 2)

Item	P/N	Description
1 2 3 4 5 6 7 8 9 10 11 12	U815-0064 590-0140 870-0023 590-0223 400-1604 415-1410 860-0242 860-0053 661-72128 805-5029 805-5028 661-92130	Load Button Assembly, Cable, LED, Dl Spring Cable Assembly LED Screw 6-32x1/4 Screw Washer, M3.5x4.0 I.D. x7.0 O.D Washer, Split Lock Metric, M3.5 Disk Mechanical Assembly Seat Insulating Shield Plate Analog Card, Duodisk

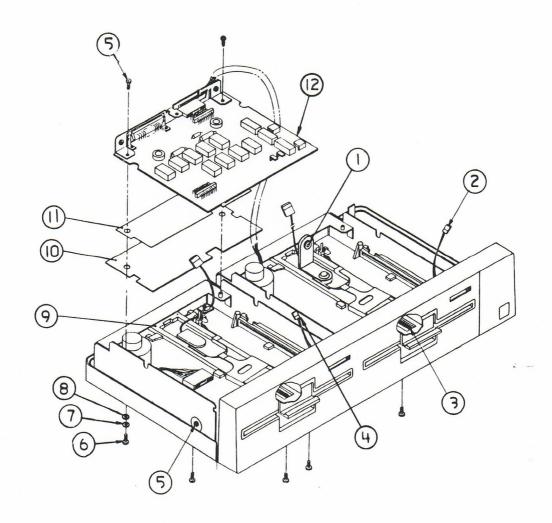

S.

DuoDisk Technical Procedures

Section 1

Troubleshooting

Contents:

General Information	2
Using the Troubleshooting Flowchart	2
Troubleshooting Flowchart	1.1
Chip Swapping Chart	4

ent fin accompany of the property of the continues of the

ted lacrims aframso institute est no delice confugaçõe elega-



General Information

The Apple® DuoDisk™ disk drive is effectively two disk drives in one case. Both drives are attached to a single analog card, with the drive on the left side defined as Drive 1.

There are four main modules which can be replaced: the interface card, the interface cable, the analog card, and the mechanical assembly. Chip swapping on the analog card is recommended before replacing the card.

Using the Troubleshooting Flowchart

Whenever a customer brings in a presumably bad Duodisk, use the flowchart on the following page to begin troubleshooting. Begin with the box in the upper left corner of the page. When you get to one of the answer boxes (boxes with dark borders), swap the modules/components, one at a time, in the order in which they are listed. Each time you swap out a module/component, turn on the computer and see if you can boot a system diskette (preferably the DOS 3.3 System Master).


Remember, once you are able to boot a diskette, be sure to run the Drive Acceptance Program (P/N 077-8101A) performing any adjustments necessary. Reinstall the customer's modules/components, one at a time, testing after each exchange to isolate the bad part(s).

NOTE: There is a chance for data on the diskette to be lost in operating the DuoDisk. This can occur in attempting the "Open Apple CTL-Reset" technique for rebooting, or when using software with certain copyright protection schemes. If a unit exhibits this problem and passes the Drive Acceptance Program, check the analog board. Analog boards with part numbers 676-[]101 and 676-[]102 may have this problem. The fix is to carefully identify and cut two capacitors off the board. The capacitors are labeled C29 and C30 in zones B1 and A1 (refer to the DuoDisk Analog Card Chip Swapping Chart and Figure 1, #4 and #5). Use small wire clippers or simply jiggle the capacitors to snap the connections.

NOTE: If you do not know how to connect the DuoDisk to an Apple computer, refer to the DuoDisk Owner's Manual for instructions.

5.

DUODISK TROUBLESHOOTING FLOWCHART

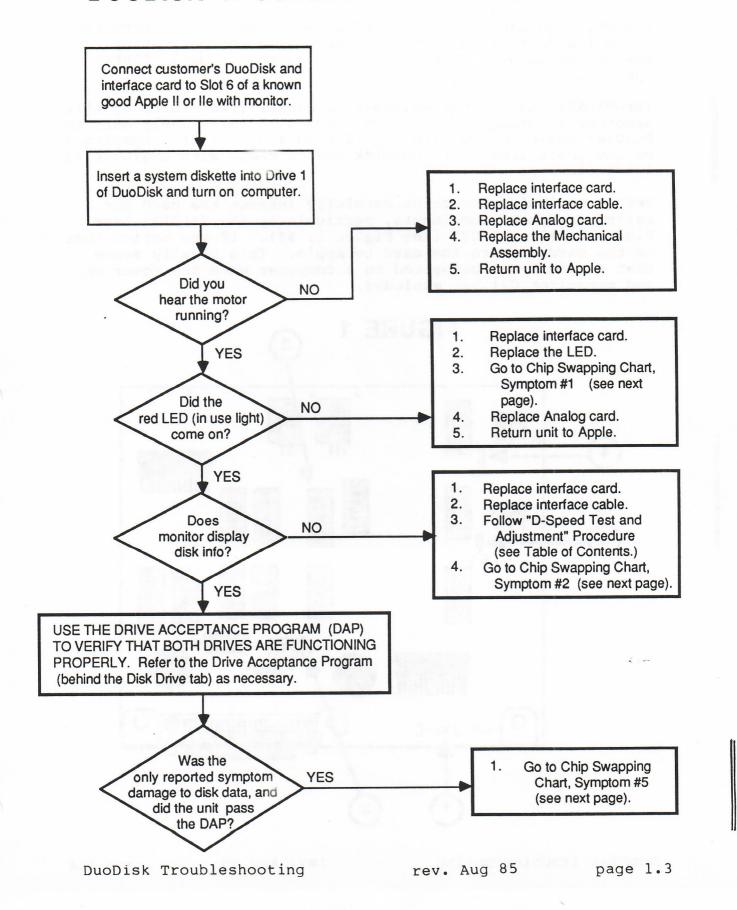




DuoDisk Analog Card Chip Swapping Chart


The chip swapping chart on the opposite page can be used for drive 1 and/or drive 2. To access the analog card chips, remove the DuoDisk cover and shield (see Section 3, "Take-Apart").

IMPORTANT: Locate the engineering number (see Figure 1, #1). Symptoms 1 through 4 on the chip swapping chart apply only to DuoDisk analog cards with Engineering #676-[]101. Symptom 5 on the chart applies to DuoDisk analog cards with Engineering #676-[]101 or 676-[]102.

Before replacing any chips carefully inspect the card for melted or broken components, particularly the 74LS125 (see Figure 1, #2) and C21 (see Figure 1, #3). If you notice fuzz on the card, return the card to Apple. This usually means that the card was connected to a computer with the power on, and capacitor C21 has exploded.

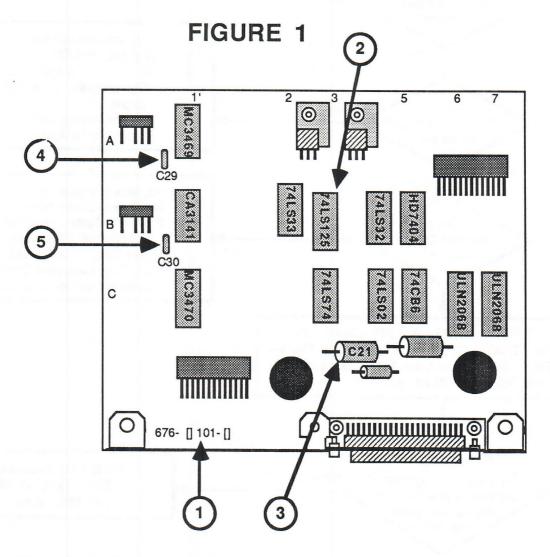

DuoDisk Troubleshooting

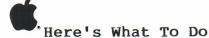

Identify the symptom and replace the related chips, one at a time, in the order in which they are listed. Each time you replace a chip, turn the computer back on to see if the problem is gone. If the problem still exists after you have replaced all the chips related to the problem, go to the next step listed in the answer box (where you left off) on the troubleshooting flowchart.

	Symptom	Location	Defective Chip Type
1.		A1 B4 B5	3469 74LS32 74LS07
	Won't boot		
2.	Motor and LED are on Won't boot	B1 B3 A1 C1 B2 B5 C3 C4 C6	CA3141 74LS125 MC3469 MC3470 74LS33 7407 74LS74 74LS02 ULN2068 ULN2068
3.	Drive reads but does not write	A1 B1 B2 B3 C5 B5	MC3469 CA3141 74LS33 74LS125 74C86 7407
4.	Drive writes when diskettes are write protected	A1	MC3469
5.	Data on disk is damaged when using "Open Apple-CTL-Reset for rebooting, or whe using software with certain copyright protection schemes. AND: Unit passes DAP AND: Analog board PN 676-[]101 or 676-[]10	Al Bl n	Capacitor C29 Capacitor C30 (remove both, do not replace)





DuoDisk Technical Procedures

Section 4

Illustrated Parts List


The figures and lists below include all piece parts that can be purchased separately from Apple for the DuoDisk, along with their part numbers. These are the only parts available from Apple. Refer to your Apple Service Programs manual for prices.

Contents:

Illustrated Parts List		. 4	4.	1
------------------------	--	-----	----	---

page 4.0



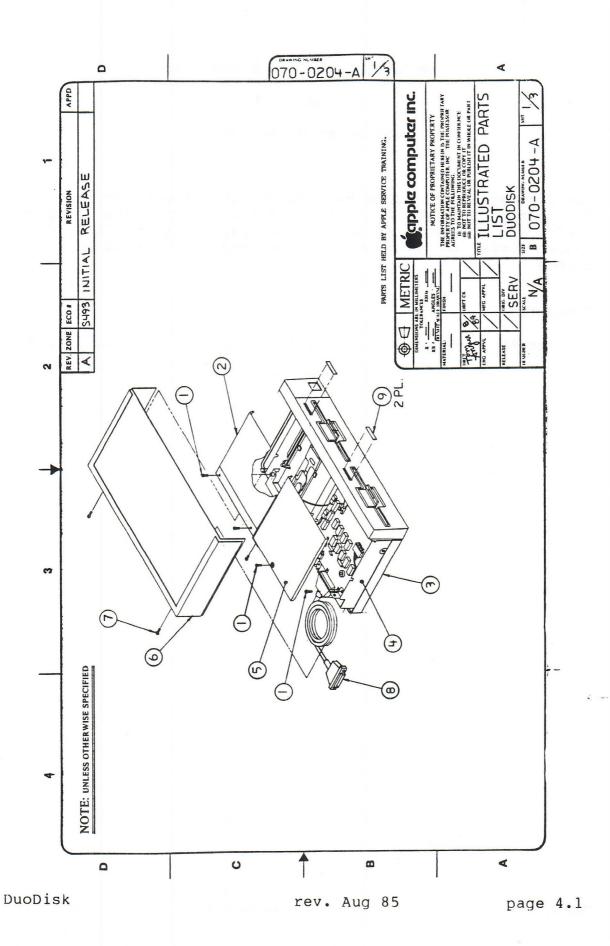




DUODISK (Figure 1)

Item	Part No.	Description
1	400-1604	Screw, 6-32x1/4
2	805-5002	Shield, Top, Drive 2
3	676-5101	Subassembly, Bottom Cover
4	805-5000	Shield, DuoDisk
5	805-5001	Shield, Top, Drive 1
6	676-5103	Top Cover Assembly
7	415-1410	Screw, M3.5x6x10MM. PN
8	590-0114	Duodisk Cable
9	825-0548	Label, Drive #, Uni/DuoDisk



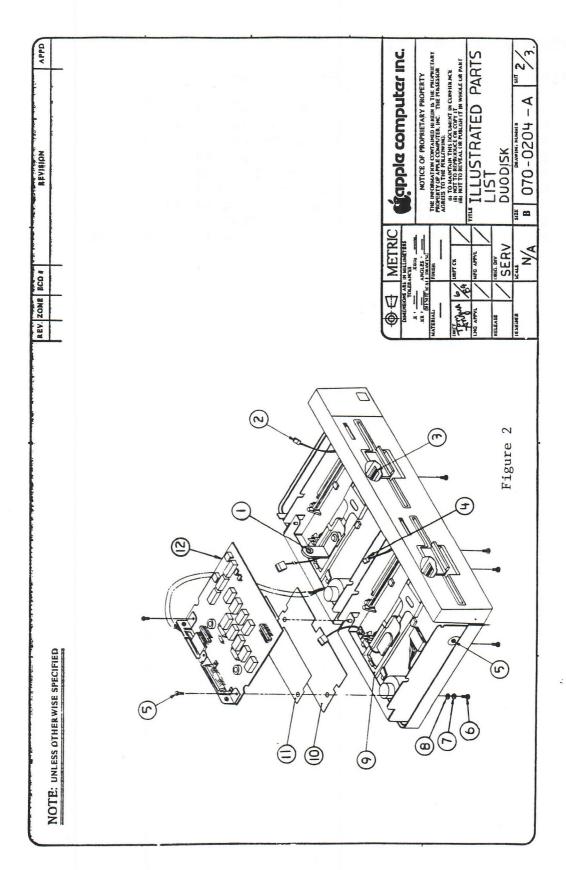


DuoDisk

apple computer

DUODISK	(Figure 2)	
1 2 3 4 5 6 7 8 9 10 11	U815-0064 590-0223 870-0023 590-0140 400-1604 415-1410 860-0242 860-0053 661-72128 805-5028 805-5029 661-92130	Load Button Assembly, Cable, LED, D2 Spring Assembly, Cable, LED, D1 Screw, 6-32x1/4 Screw, M3.5x6x10MM. PN Washer, M3.5x4.0 I.D.x7.0 O.D. Washer, Split Lock Metric, M3.5 Duodisk Disk Mech. Assembly Shield Plate Seat Insulating Duodisk Analog Card



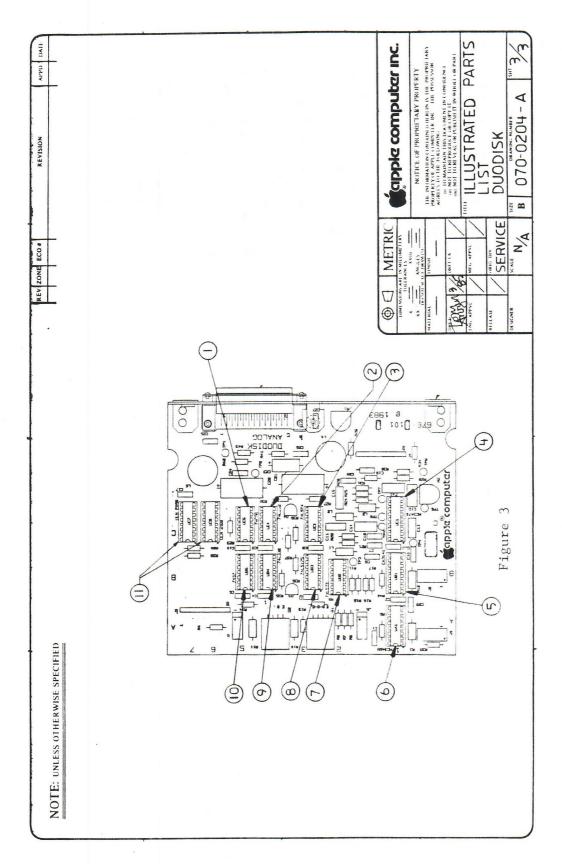



DUODISK ANALOG CARD (Figure 3)

1	322-0086	IC, 74C86
2	306-0002	IC, 74LS02
3	305-0074	IC, 74LS74
4	355-3470	IC, MC3470 Floppy Disk Read Ampl.
5	352-3141	IC, Hi Voltage Diode Diode 30V, 100 mA
6	331-3469	IC, 3469 Floppy Disk Write Cont.
7	305-0033	IC, 74LS33
8	306-0125	IC, 74LS125
9	305-0032	IC, 74LS32
10	302-0007	IC, 7407
11	351-2068	IC. 1.5A Darlington

